

Explanation:

The **Burglar Alarm Linkage** was designed for connecting the recorder to an external security system through simple alarm in/out, once connected, it's possible to have triggers to happen only when the security system is **armed**.


For example: The store owner closed the store and went home, he is arming the burglary alarm system, from that point on the NVR will send push notifications to his smartphone.

Physical connection

Connect alarm out from the BAS, to the chosen alarm in of the recorder.

Set up:

1. Below are basic activation for the alarm linkage

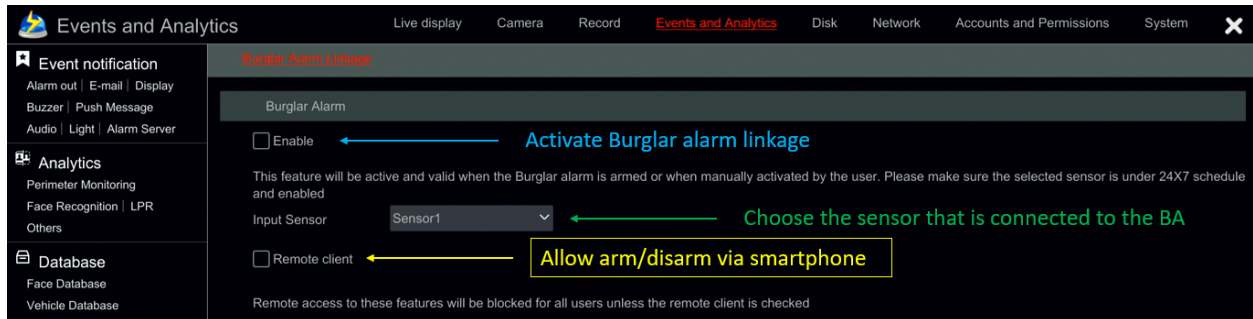

2. Below we add the cameras for which this feature will be applied

BURGLAR ALARM LINKAGE

General Event
Motion | Sensor
Combined Alert | IPC Offline
General Faults

Burglar Alarm Linkage
Burglar Alarm Linkage

Alert Status
Alert Status

Settings and Status

Status: Active Manual Deactivation

Apply for

Camera/Sensor	Inactive Triggers	Configure	Delete

While the feature is enabled and burglary alarm is disarmed, the linkages configured above will be inactive.

Apply

3. After adding the cameras, we press “Configure” in order to choose “Inactive triggers”

Events and Analytics

Live display Camera Record Events and Analytics Disk Network Accounts and Permissions System

Event notification
Alarm out | E-mail | Display
Buzzer | Push Message
Audio | Light | Alarm Server

Analytics
Perimeter Monitoring
Face Recognition | LPR
Others

Database
Face Database
Vehicle Database

General Event
Motion | Sensor
Combined Alert | IPC Offline
General Faults

Burglar Alarm Linkage
Burglar Alarm Linkage

Alert Status
Alert Status

Burglar Alarm Linkage

Burglar Alarm

☒ Enable

This feature will be active and valid when and enabled

Input Sensor: Sensor1

☐ Remote client

Remote access to these features will be b

Settings and Status

Status: Active

Apply for

Camera/Sensor	Inactive Triggers	Configure	Delete

While the feature is enabled and burglary alarm is disarmed, the linkages configured above will be inactive.

Apply

Add

OK Cancel

Inactive Triggers:

BURGLAR ALARM LINKAGE

These are the triggers that **WILL NOT WORK** when the Burglar alarm system is **DISARMED**

For example: if we don't want push and email notifications when we the BA system is disarmed – we will set it like this:

