


Provision-ISR cloud


One of the ways to login to our recorders is via the cloud.

It can be done by 2 simple steps:

1. Login to the provision cloud web page: WWW.PROVISIONISR-CLOUD.COM

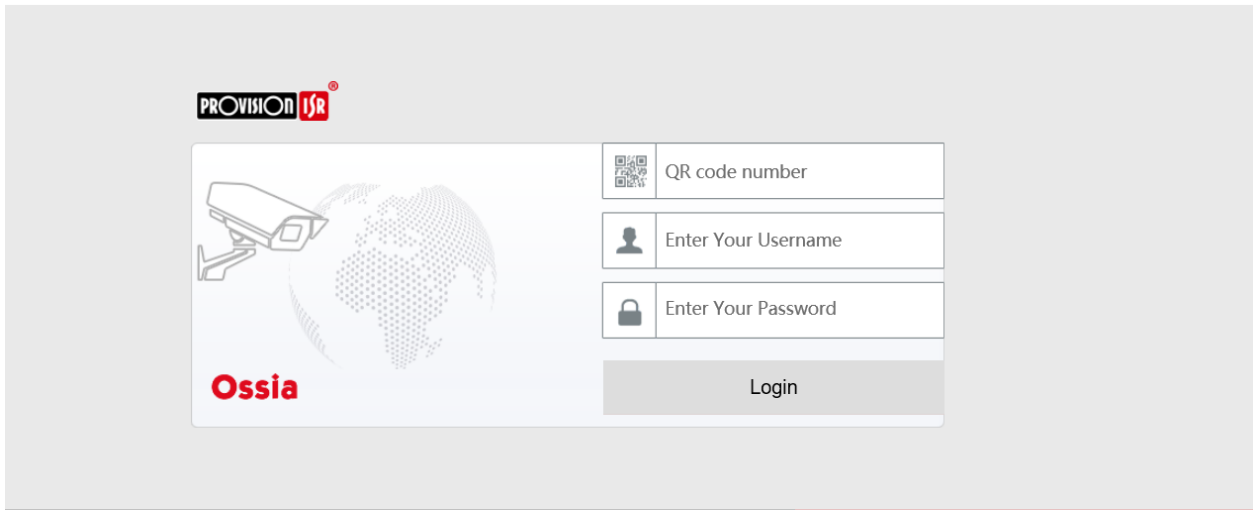


2. We will get the P2P address from the NVR:
 - a. Enter to the “NAT” area under “network” as in the picture:

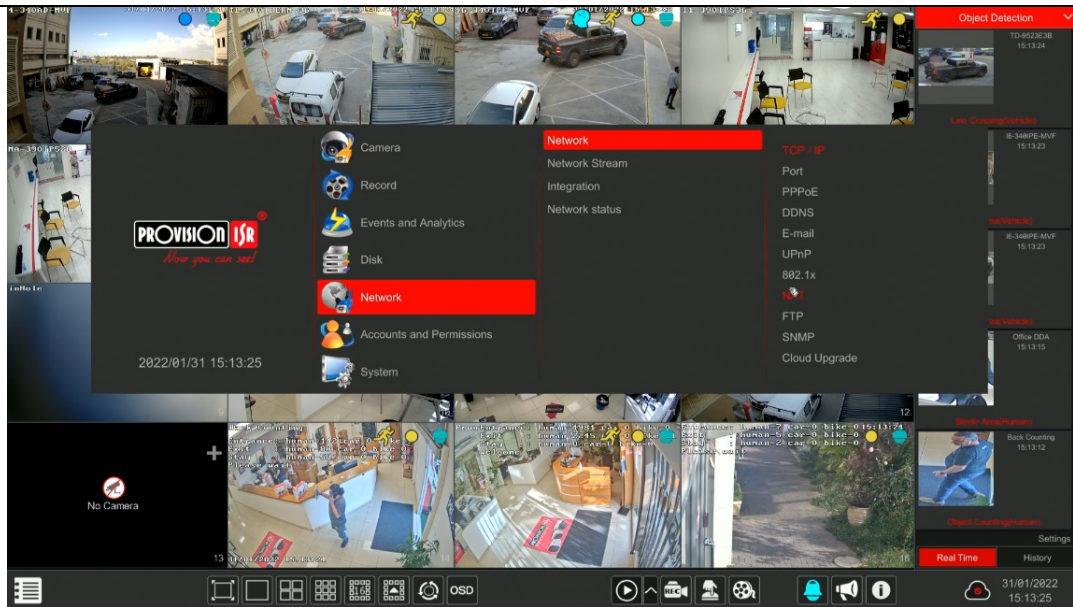

Next, we will find the P2P QR code.

We should **enable the NAT** in order to gain access via P2P:

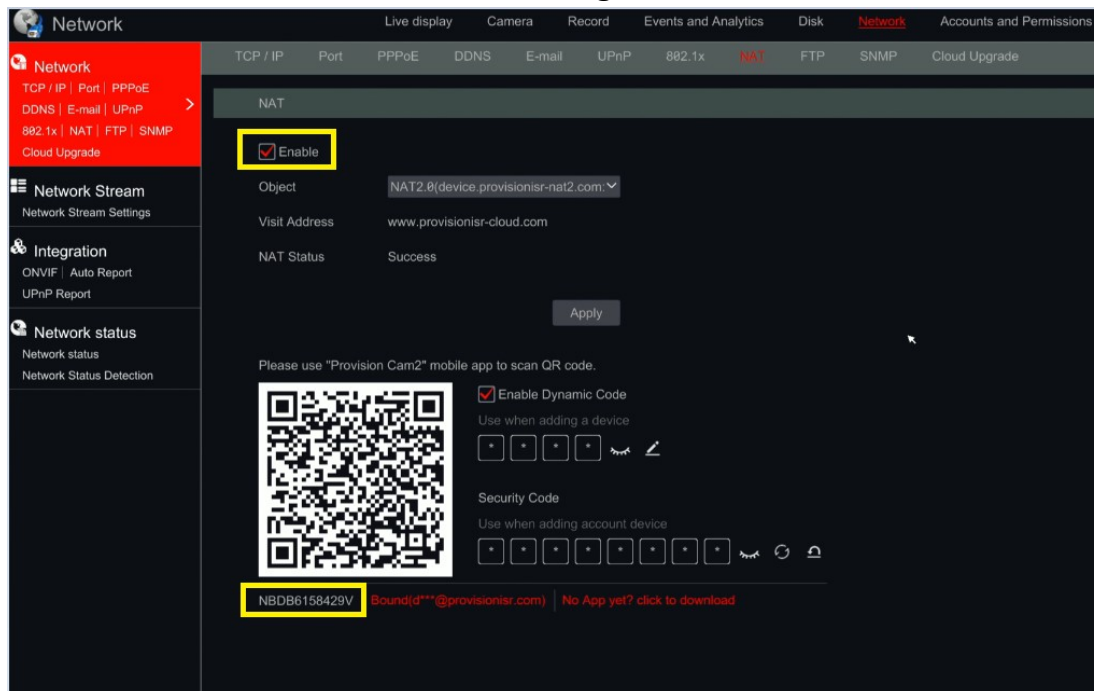

Username and password:

These are the same username and password we use to login to our recorder.

If we don't know them: [recorder password recovery](#)